
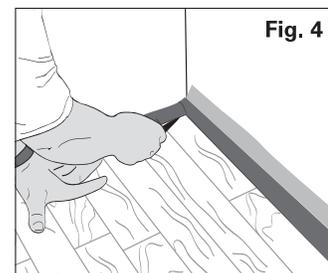
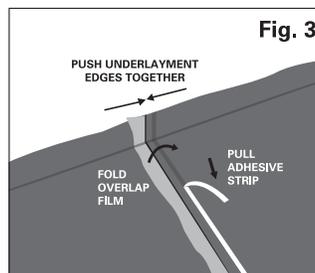
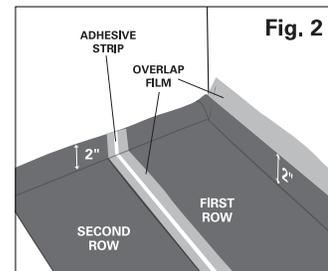


QUIET CUSHION®

Premium Acoustical Underlayment

INSTALLATION INSTRUCTIONS

1. Always follow the flooring manufacturers' installation instructions with respect to preparing and leveling the sub-floor. Make sure the sub-floor is level, clean and dry.
2. Concrete must be dry with moisture emission rates that do not exceed 3 lbs /1,000 sq ft/24 hrs as measured by Anhydrous Calcium Chloride Test (ASTM-F-1869-98).

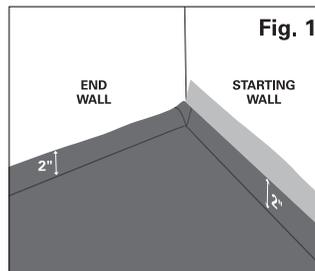

3. Start in the corner of the room by rolling out the underlayment with the overlap flap and adhesive strip facing up. Put the overlap flap side of the underlayment against the wall, running it 2 inches up both the starting wall and both end walls (see Fig. 1). This 2 inch perimeter running up the wall provides a moisture-proof enclosure for the flooring.
4. Lay a second row of underlayment alongside the first, (butt the edges together but do not overlap them) with the overlap flap facing the first row. The overlap film will lie over the adhesive strip from the first row(see Fig. 2). Allow for the ends to wrap up the end walls to maintain the 2 inch perimeter of underlayment around the room.
5. Fold back the overlap flap to expose the peel and stick adhesive strip. Remove the white protective cover from the adhesive strip (see Fig. 3), and lay the overlap flap across the first row of underlayment. Press into place. Repeat steps 4 and 5 row by row until the entire floor area is covered.
6. After the flooring is installed, trim the excess underlayment back to the height of the finished floor. Do this prior to installing base or molding (see Fig. 4)

For questions, please contact us at: 1-866-435-8665